
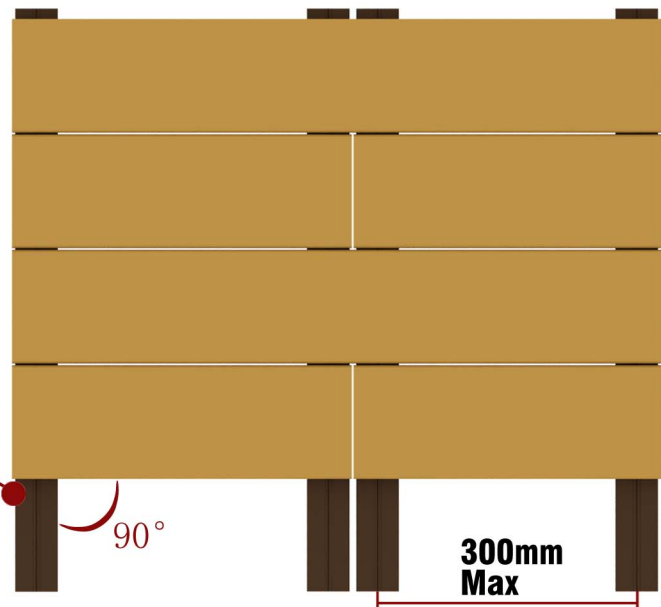
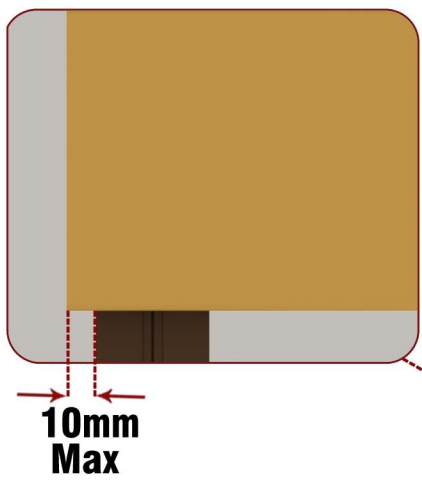
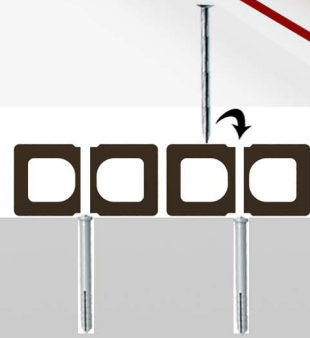


WPC Decking Floor Installation

WPC decking floor installation notes:

1. Make sure the ground foundation is flat, clean and strong enough before floor installation. It needs to be laid solid base on the ground. If it is mud ground, for later keel fixing use. And if it is a concrete ground, it should be ensured more than 6cm thickness, in case that the ground crack, subsidence or other situations happen.
2. If the concrete surface is a closed low-lying, make sure to keep a drain pipe between two keels by every 2.5 meters. And this drain pipe should be at a size of 8cm diameter linked to underground, so that to let the water drain away when it rains.
3. When the floor need to be installed in some special position, such as roof platform, it should be more careful and avoid destroy the waterproof layer.
4. All screws used during installation process should be stainless steel material, ensure that won't rust.


Installation only with screws for solid decking

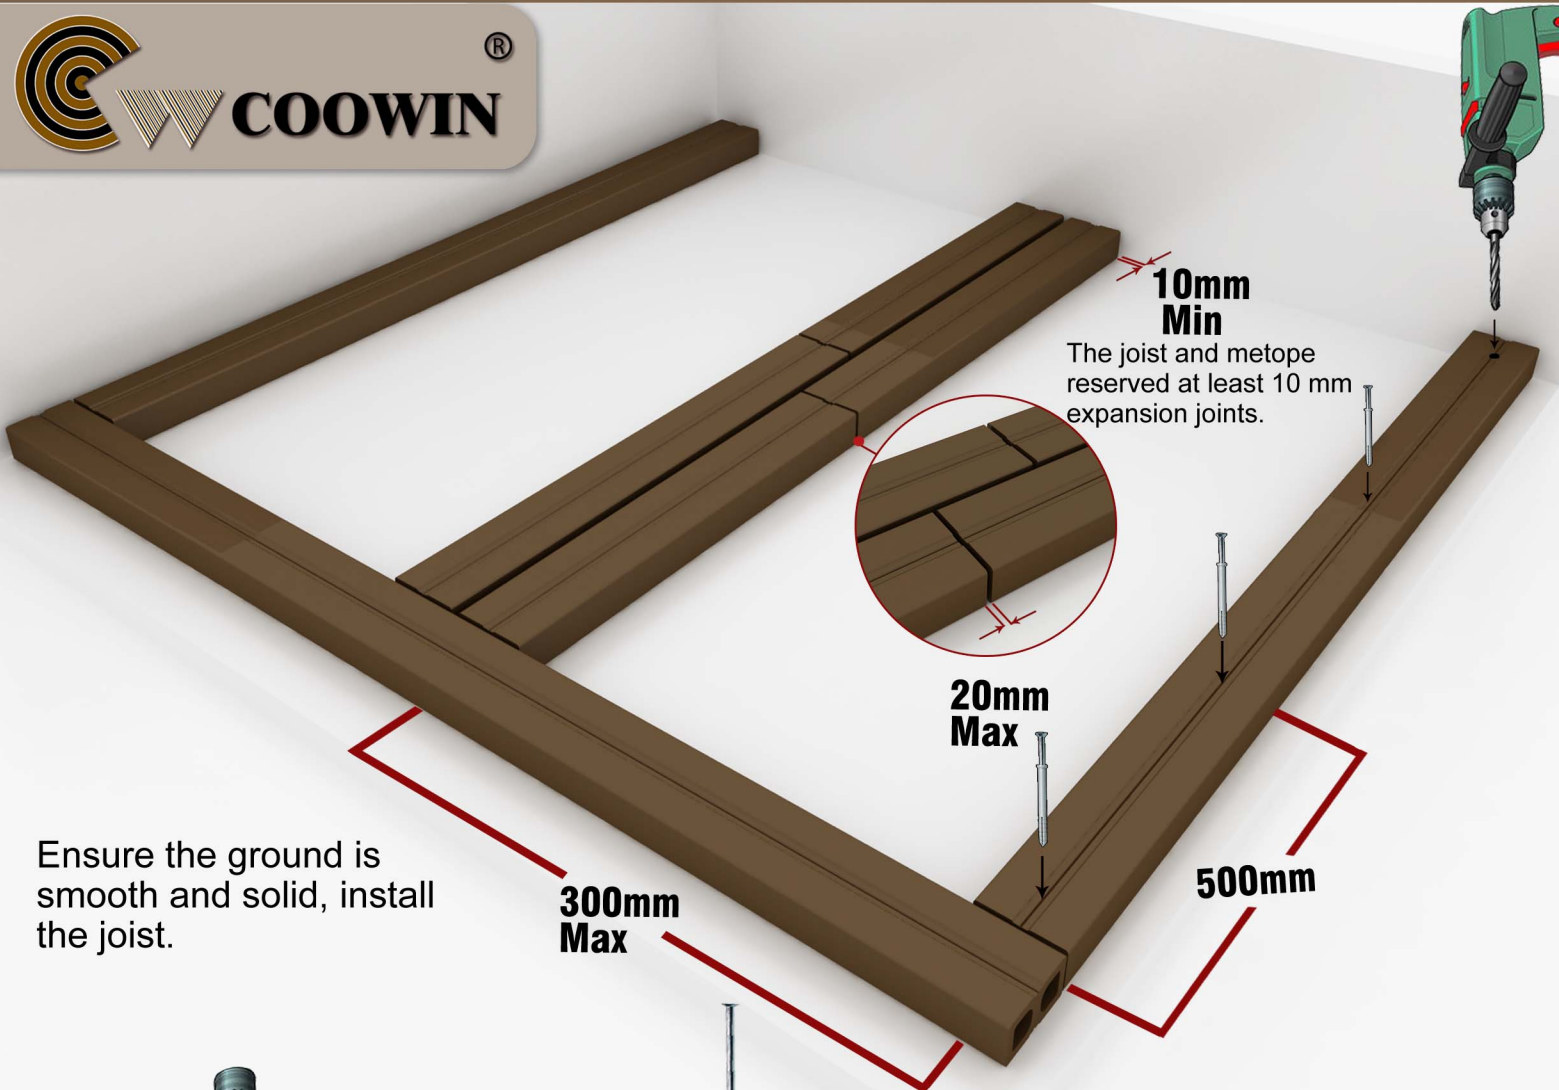

Fixed joist


When installation, the WPC decking must be perpendicular to the joist.

Installation only with screws for solid decking

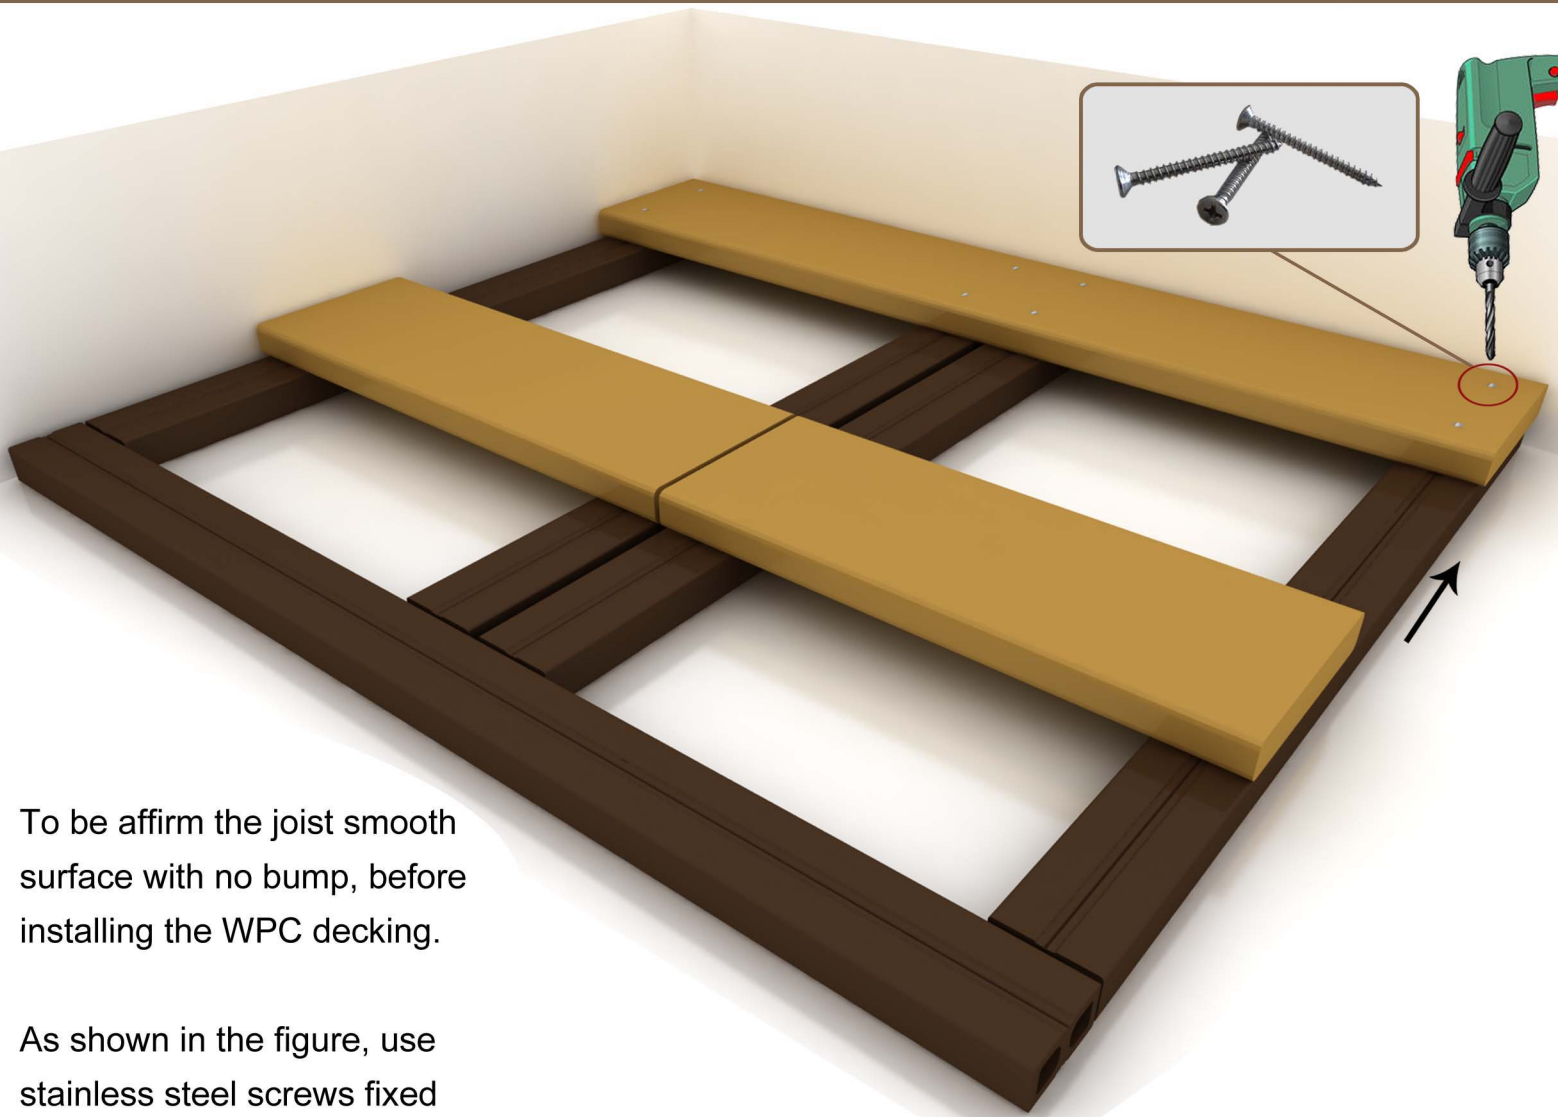



To be affirm the joist smooth surface with no bump, before installing the WPC decking.

As shown in the figure, use stainless steel screws fixed installation.

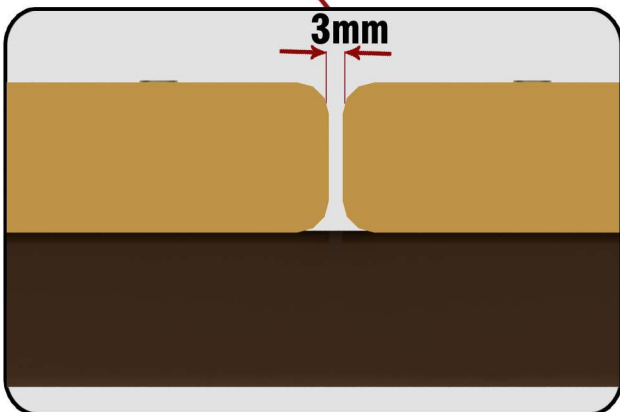

2 Composite Decking
COOWIN GROUP

Installation only with screws for solid decking

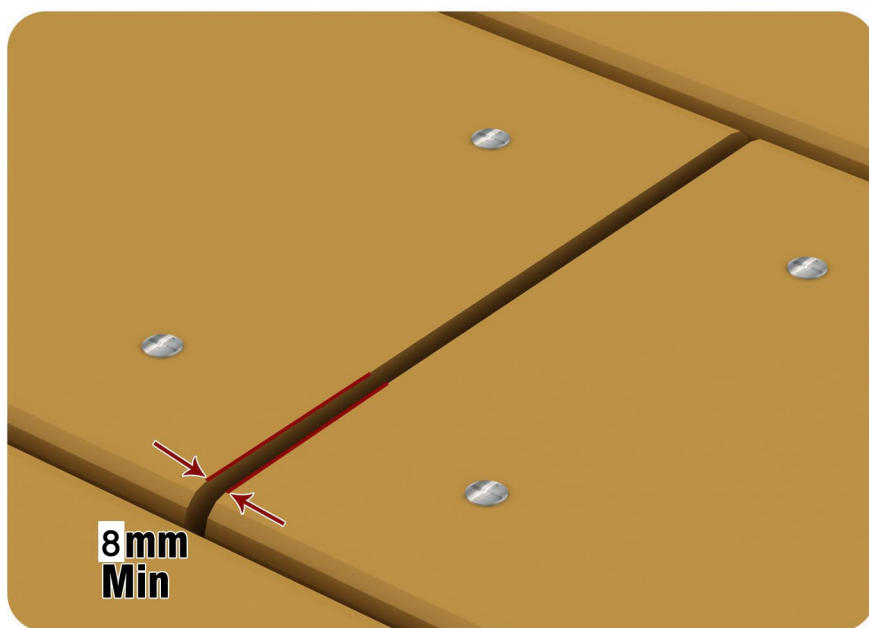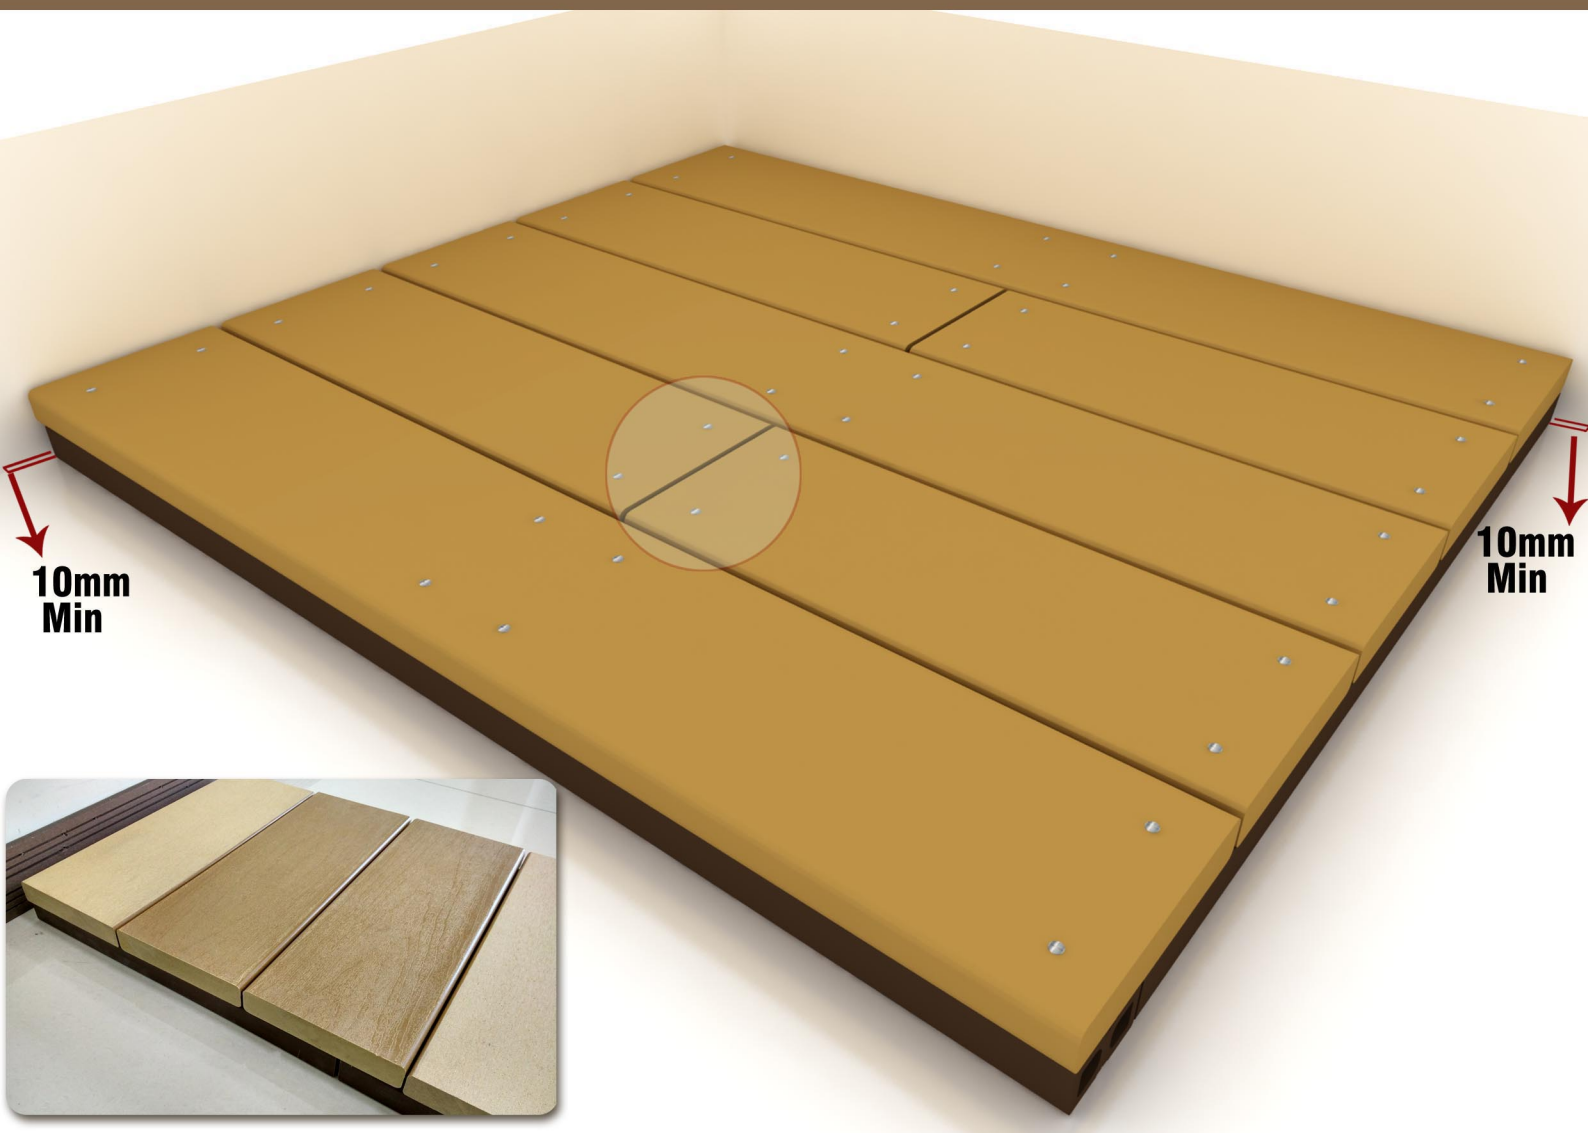


Make sure the reserved expansion joints between two WPC decks at least 8mm.



3

Composite Decking
COOWIN GROUP

Installation only with screws for solid decking

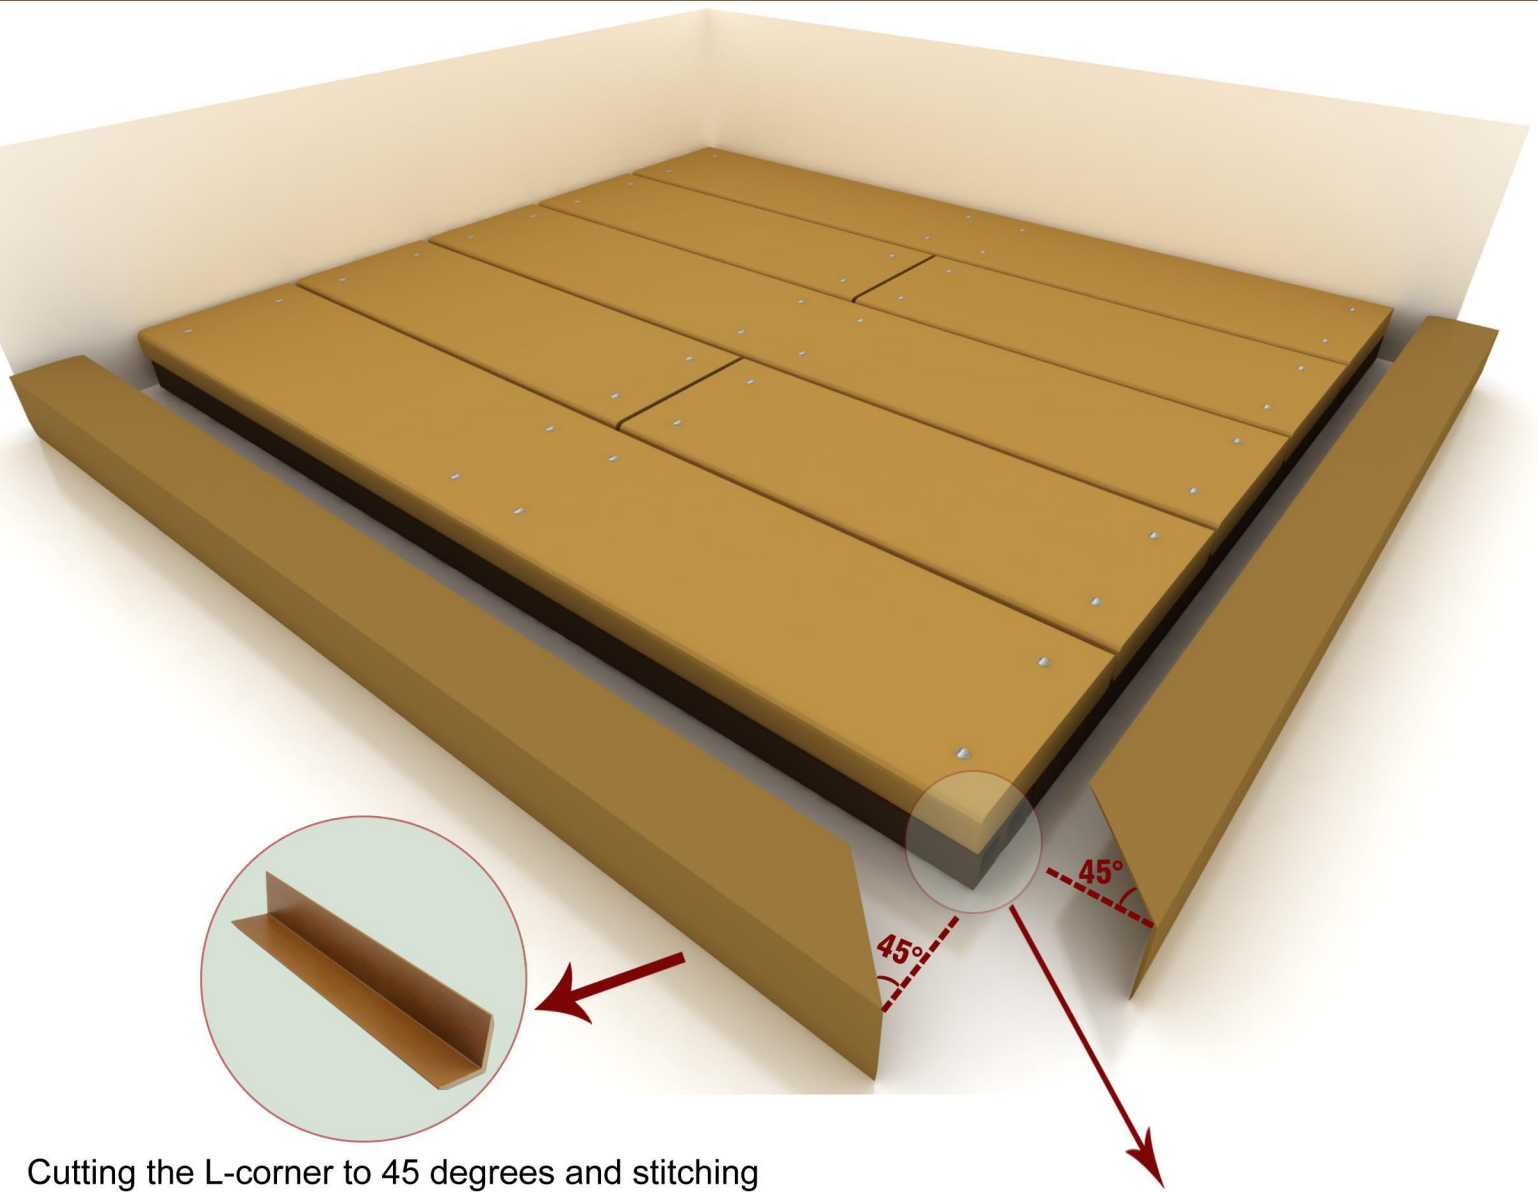



Cutting the L-corner to 45 degrees and stitching at the corner of the terrace decking.



Fixed the L-corner with screws to complete the installation.

Installation only with screws for solid decking

Installation finished.

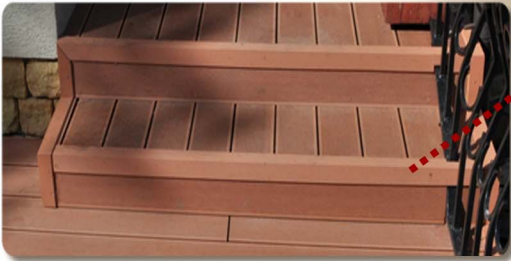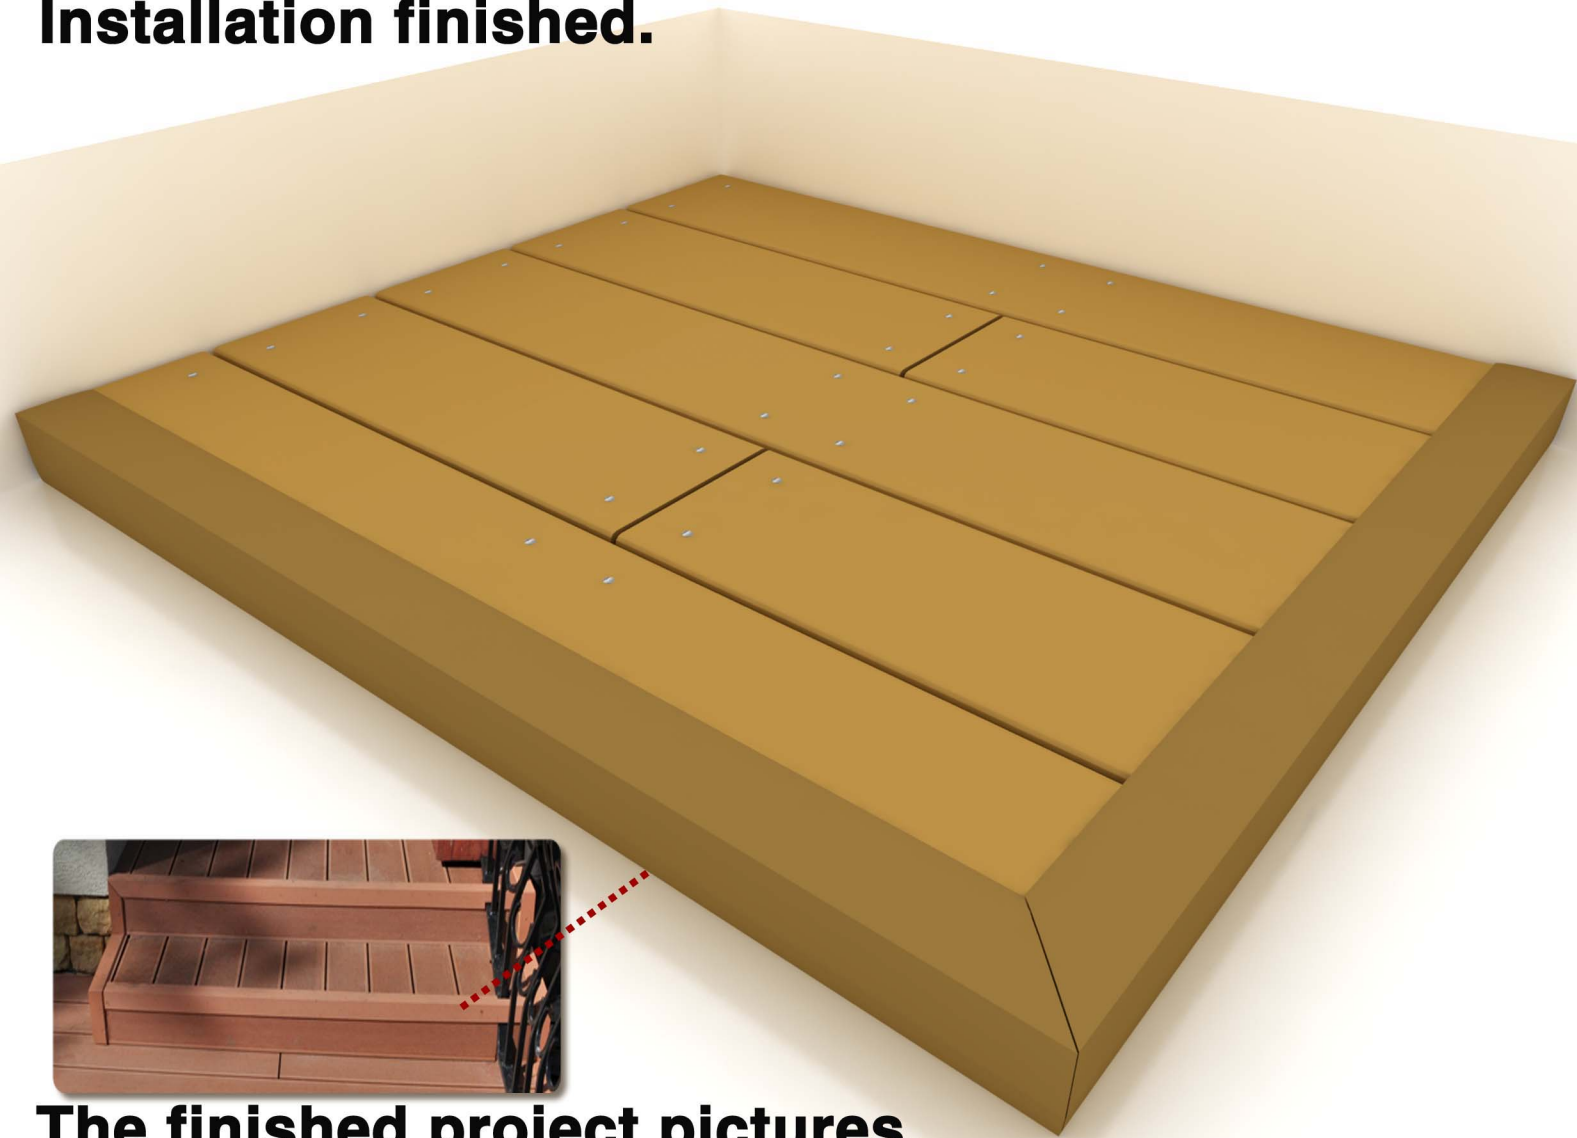

The finished project pictures.

